


Product Information

Materials testing machine Z2000E and Z2500E with testControl II

CTA: 95946 90338



Z2500E with hydraulic grips

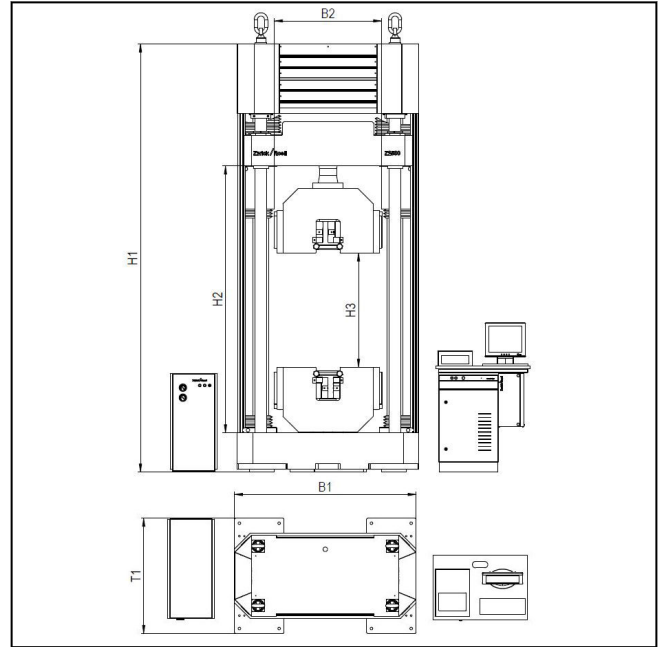

Drawing: Z2500E with hydraulic grips

Advantages and features

Modern load-frame design

- The robust load-frame features four hard-chromed guide-columns and massive base and moving cross-heads, ensuring excellent guidance properties and a high level of machine stiffness.
- Maintenance-free digitally controlled AC drive technology combined with an innovative motor feedback system allows excellent constant speed characteristics to be achieved even at extremely low speeds.
- The backlash-free pre-stressed precision ball-screws with digitally controlled AC servo drive allow virtually maintenance-free operation.
- The large test area combined with low overall height enables specimens and components with a wide range of lengths to be tested.
- The testing machine is positioned directly on the ground with no foundation.

Operator convenience

- Convenient operating height for specimen insertion with grips installed.
- testXpert III's intelligent test environment concept reduces set-up times and increases productivity.

Innovative electronics

- The new testControl II measurement and control electronics provide the ideal basis for precise, reproducible test results.
- Developed in-house by ZwickRoell, the electronics impress through maximum accuracy, high measured-value rates and flexible modularity.

Satisfying the most demanding safety requirements

- Compliance with the statutory safety requirements of the EC Machinery Directive is ensured in all materials testing machines, while an EC Declaration of Conformity accompanies every machine supplied.
- Only the latest safety technology and proven industrial components are used.
- The highest degree of safety for the operator, test results, specimen material, and testing system are guaranteed.

Future-proof

- Modular design means that the testing system can be re-equipped or upgraded whenever required.
- Moreover, testControl II control electronics are compatible with future-generation ZwickRoell software.
- Even after a product has been discontinued, spare parts remain available for a minimum of 10 years.

Product Information

Materials testing machine Z2000E and Z2500E with testControl II

Description	Value
Load frame	
Paint finish	RAL 7011 iron gray and RAL7038 agate gray
Ambient temperature	+10 ... +35 °C
Humidity (non-condensing)	20 ... 90 %
Drive	
Motor	AC servo motor with concentrated windings, Hiperface® motor feedback system
motor holding brake	yes
Control, set-value specification	digital (real-time Ethernet, EtherCAT®)
Controller/cycle time	adaptive / 1000 Hz
Repeat positioning accuracy on crosshead	± 1.0 µm
Measurement and control electronics	
Number of slots available for measurement and control module	5 synchronized module bus slots, 1 synchronized PCIe slot ¹⁾
Force measurement	Class 0.5 from 1% of Fmax / Class 1 from 0.2 % of Fmax, as per EN ISO 7500-1, ASTM E4, JIS B 7721
Calculated resolution (e.g. load cell in tensile/compression direction)	24 bit
Measured-value sampling-rate, internal	400 kHz
Measured-value transmission rate to PC	500 (optionally 2000) Hz
Zero-point correction	automatic, at start of measurement
Measurement signal runtime correction for all channels	yes
Interface to PC	Ethernet
Eco mode?	yes, power unit automatically switched off (time adjustable)
CE compliance?	yes, as per Machinery Directive 2006/42EC
Electrical supply data	
Mains supply frequency	50/60 Hz
Electrical supply	400 +/- 10 % V, 3Ph/PE
Power consumption	24.5 kVA

1) A high-quality DCSC measurement module for one load cell is included in delivery (occupies one module bus slot).

Options¹⁾

Description
Display-equipped remote control for testControl II
Measured-value transmission-rate increase from standard 500 Hz to 2000Hz
Add-on table unit for electronics cabinet, with CPU-holder
ZwickRoell extensometer attachment (see catalog)
Front/rear safety device
Lead-screw guard

1) See catalog for item numbers and further details

Product Information

Materials testing machine Z2000E and Z2500E with testControl II

Product data

Type	Z2000E	Z2000E (H1-500)	Z2500E	
Item number	1019978	3003323	1017639	
Load frame				
Test force F_N in tens./comp. direction	2000	2000	2500	kN
No. of guide columns	4	4	4	
No. of drive screws	2	2	2	
Stiffness of load frame at H2 = 1000 mm	1643	1643	1643	kN/mm
Height - H1	4310	3810	4310	mm
Width - B1	2000	1830	2000	mm
Depth - T1	1160	1160	1160	mm
Test area width - B2	1120	1120	1120	mm
Test area height - H2	2736	2236	2736	mm
Test stroke - H3 (with hydraulic grips)	1200	700	1150	mm
Weight without accessories	11819	11464	12486	kg
with hydraulic grips	14429		16052	kg
With hydraulic grips		15000		
Specific floor loading (with hydraulic grips)	212	147	236	kN/m ²
Noise level at maximum test speed	<70	<70	<70	dBA
Drive				
Crosshead speed	0.0001 to 325	0.0001 ... 325	0.0001 to 275	mm/min
Increased crosshead return speed (at reduced force)	400	400	350	mm/min
Drive travel resolution	0.000124	0.000124	0.000124	µm